

Wireless Control Pulsed Electric Multi Vibrator


USER MANUAL

Thank you for choosing PLEASURELAB For More information of PLEASURELAB, please visit our official website: https://www.pleasurelab.com/

Before first use, please read the instructions below carefully.

About this Device:

This is a multi-functional vibrator for both men and women. With a very special shape, this all-rounder brings everyone to orgasm, whether solo or as a couple. The adorable dual prong is flexible and bendable, you can enjoy clamping, pinching and shaking with it. With three powerful motors inside, it pleases you and your partner with 10 patterns of vibration. You may also try 10 electric massage modes on the prongs and the cock ring if you want to experience the exciting pulsation stimulation. It will push your sexual satisfaction to incredible new heights.

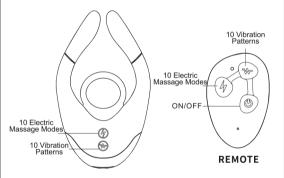


Specifications

Item No. : HM07007 Material : Body-safe Silicone and ABS Battery: Rechargeable Li-ion Batteries Charging Time : 80min User Time : 60min Functions: 10 Vibration Patterns and 10 Electric Massage Modes (on prongs and cock ring). Remote Control Distance: Max 10m

How to use

 1.Make sure your item is fully charged before first use. It will NOT work while charging!



- 2.Press (%) button on the item for 2 seconds to switch it on.
- 3. When using without the remote, just press the (%) button to shift 10 vibration patterns and press the (4) button to shift 10 electric modes.
- 4. To use with the remote, please turn on the item as step 2 first, then press the ([®]) button on the remote to activate remote control function.

--Shortly press the (%) button to shift 10 vibration patterns and press the ($4\!\!/$) button to shift 10 electric modes.

--Press the above two buttons for 2 seconds respectively if you want to stop vibrating or electric massage.

- Press the (()) button on the remote for 2 seconds again if you want to turn off the remote, then the item will also be switched off.
- 6.Under remote control mode, you may also press any button on the item for different patterns or modes.
- 7.Please note that dry skin might not feel the electric massage effect easily.
- 8.LED light indication: Device ON: Solid white light Low Battery Warning: White light flashing. On Charging: White light blinks Fully Charged: Solid white light ON

Disclaimer

This product is to be used as a novelty for people over the age of 18 only. Users of this item do so at their own risk. It should not be use on prolonged or frequent basis. Neither our Toys nor its retailers assume any responsibility or liability for the use of this product.

This product doesn't claim to cure any disease or STI.

Warranty Terms & Conditions

Our TOYS warrants this device for a period of one year, after the date of original purchase against defects due to faulty

workmanship or materials. If you experience any

factory/assembly defects, please contact us and we will do our best to solve your issues as soon as possible.

Caution: please do not take your vibrator apart by yourself or by an unauthorized repair shop, as your warranty will automatically expire.

Safety Tips

Avoid sharing this device with others due to hygiene concerns. Only water based lubricant is recommended to use with this product.

Do not use massage oils or hand cream as lubricants for this device, as you will damage its silicone soft touch surface.

Be cautious when using your device for anal insertion.

Stop using this device if its tip is chipped or broken or has sharp edges.

Cleaning and Storage

Always clean your device thoroughly before and after each use. Clean your device with an antibacterial toy cleaner. Alternatively, you can wash the device with warm water and soap, rinse with clean hot water and pat dry with a clean towel.

Hard detergents, disinfectants, acetone or alcohol are not recommended to use to clean your device.

Store your device in a clean and dry space and keep it out of children's reach.

Applicable for ALL products, the model may be changed for improvements without notice.